





Installation:

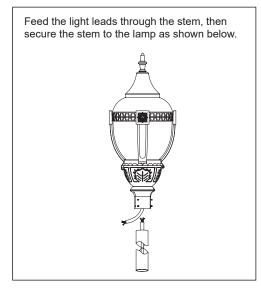

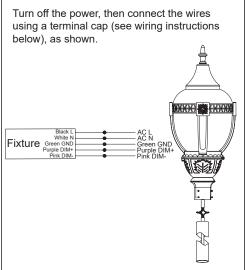

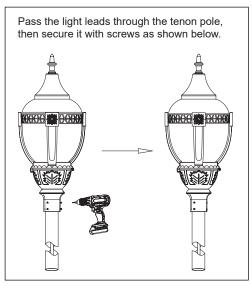

Adjust wattage and color temperature:

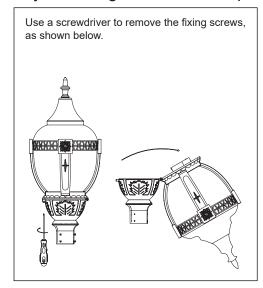

Set the color temperature switch to the desired setting, then adjust the power switch to the required wattage. The light sensitivity switch function is illustrated below.

