




RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY IN ACCORDANCE WITH NATIONAL, LOCAL BUILDING AND ELECTRICAL CODES. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.


IMPORTANT

1. Read all instructions.
2. Install in accordance with national and local electrical code regulations.
3. This product is intended to be installed and serviced by a qualified, licensed electrician.
4. Do not install in wet locations. For dry and damp use only.
5. Turn off electrical power before installing or servicing fixture in any way.
6. To reduce the risk of fire and overheating, make sure all connections are tight.
7. Under no circumstances can the lighting fixture be covered with heat insulation gasket or similar materials.

WIRING


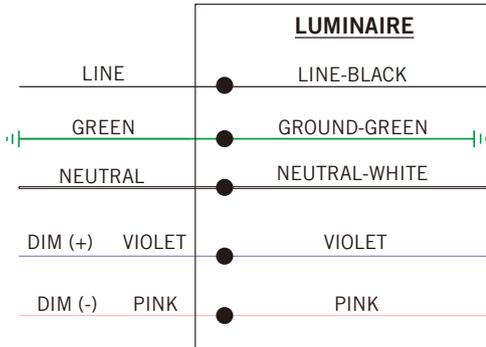


STRUCTURE OF LAMP

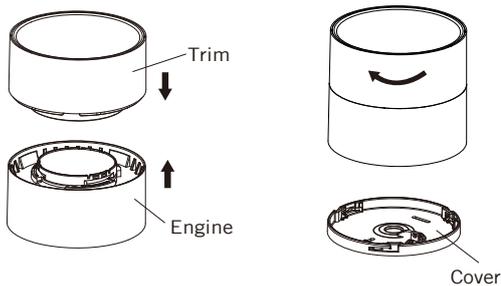

When trim and engine are separated, attached together, and secure them with clockwise direction.

INSTALLATION

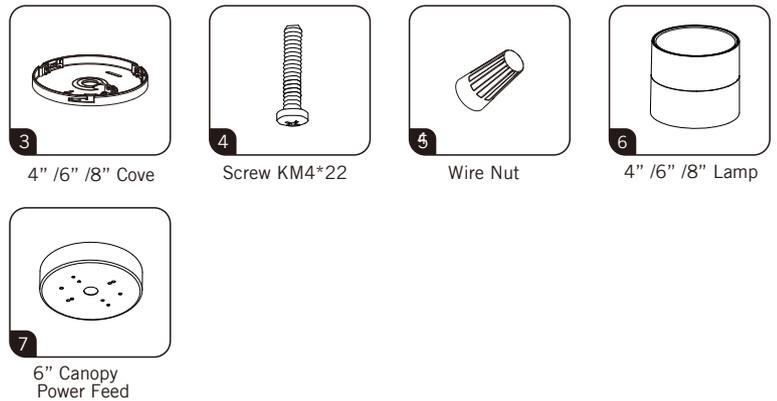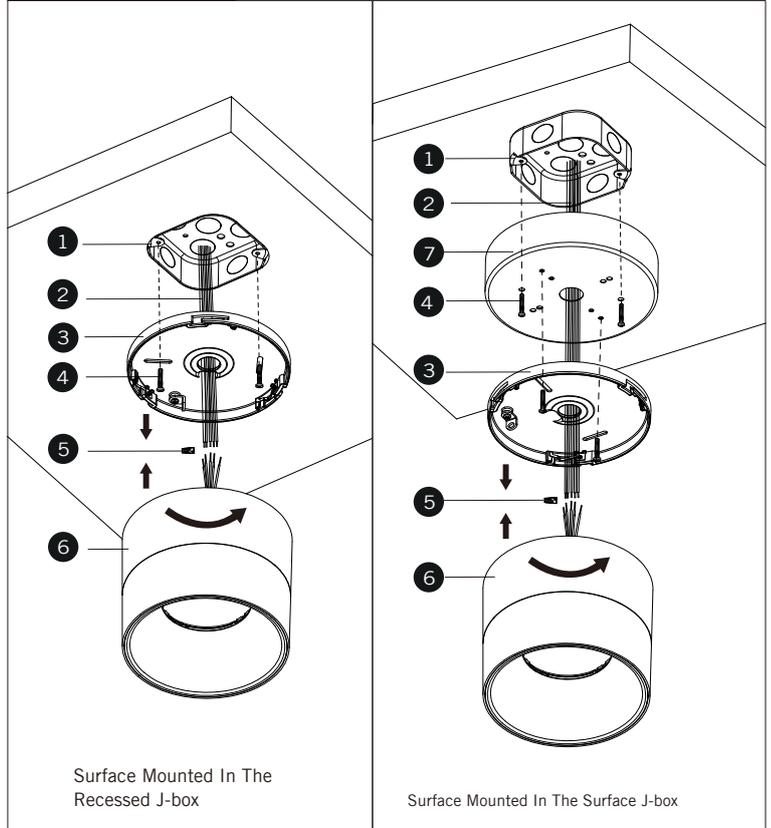


PARTS

- 1 4" Octagon Junction Box (By Others)
- 2 Power Cord (By Others)
- 3 4" /6" /8" Cove
- 4 Screw KM4*22
- 5 Wire Nut
- 6 4" /6" /8" lamp
- 7 6" Canopy Power Feed




RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY IN ACCORDANCE WITH NATIONAL, LOCAL BUILDING AND ELECTRICAL CODES. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.


Step 1

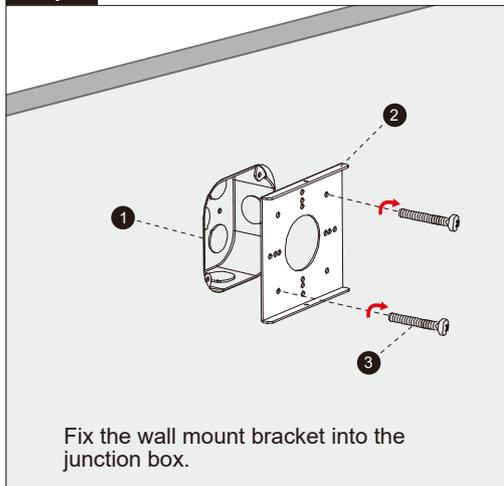

Step 2 Wiring

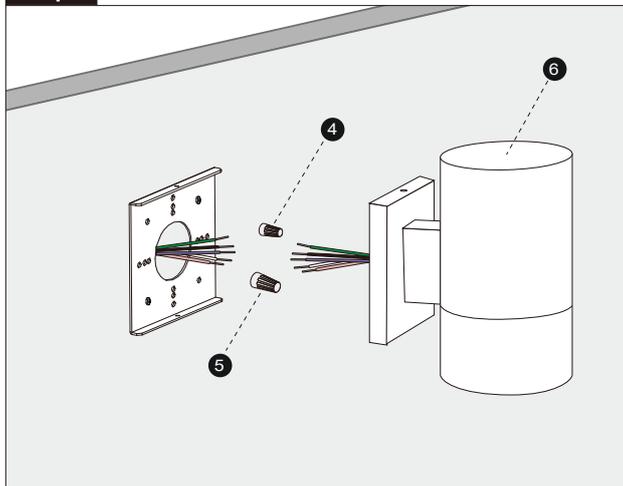


Step 3

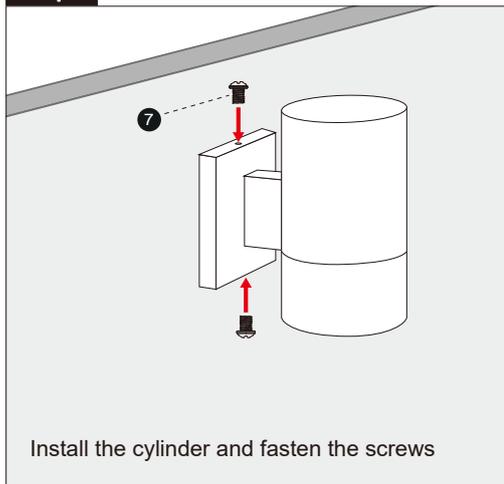


► PARTS


- ① 4" Octagon Junction Box (By Others)
- ② Wall Mount Bracket
- ③ Screw 8-32*22
- ④ Wire Nut P2
- ⑤ Wire Nut P3
- ⑥ 3 1/4"/6"/8" Lamp
- ⑦ Screw PM3*8

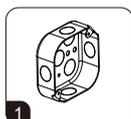

4" Octagon Junction Box (By Others)

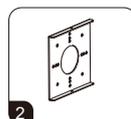

Wall Mount Bracket

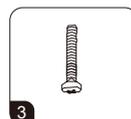


Screw 8-32*22



Wire Nut P2



Wire Nut P3

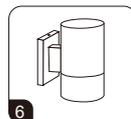

3 1/4"/6"/8" Lamp



Screw PM3*8