
MWR MWS Series

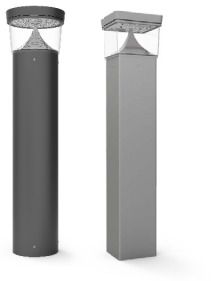


ELECTRICAL SHOCK HAZARD

WARNING

Disconnect the electrical supply power at the service panel (fuse or circuit breaker box). Failure to do so could result in serious injury or death. Only qualified electricians should install this fixture and the installation MUST conform with the National Electrical Code and all applicable local codes and ordinances. Ensure that only proper tools, materials, and equipment are used during installation.


Step.1

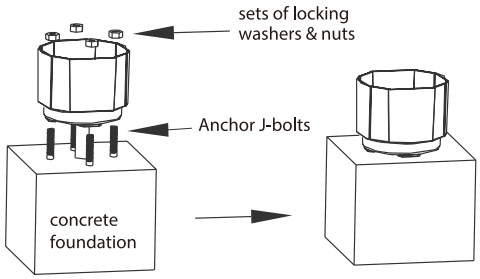

Anchor J-bolts to concrete



Anchor J-bolts

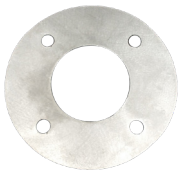


Leveling washer

ANCHOR BOLT INSTALLATION CAUTION:

Install according to all applicable local codes.
Install three Anchor J-Bolts in concrete foundation (by others) using the template provided. Bolla rd Base may also be used as the template. Bolt threads should protrude at least 3” from concrete.

Step.2

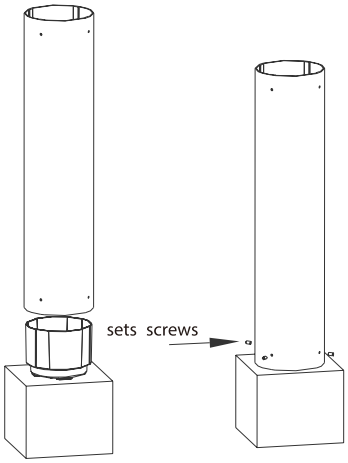

Step.3

