



**CONCRETE POUR KIT / SLEEVE**

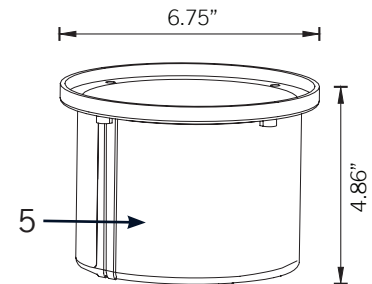


- 1) Front cover
- 2) Tempered Glass
- 3) Housing
- 4) Cable gland
- 5) Mounting sleeve/ concrete pour kit

**CONCRETE INSTALLATION**

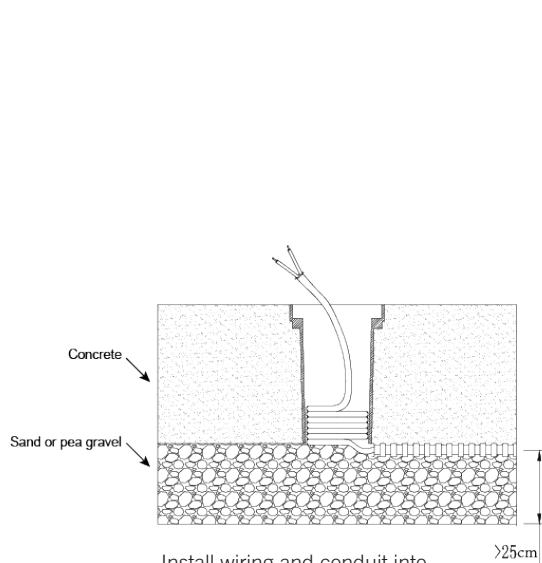


Install wiring and conduit into sleeve at the desired position. Secure the sleeve to the bottom of the application ground by using brackets provided.

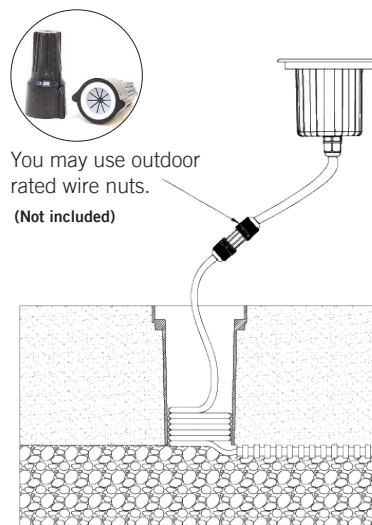

You may use outdoor rated wire nuts.  
(Not included)


After concrete has cured, connect the wires using IP68 connector, or outdoor rated wire nuts.  
(IP68 connector, or outdoor rated wire nut, Not included)

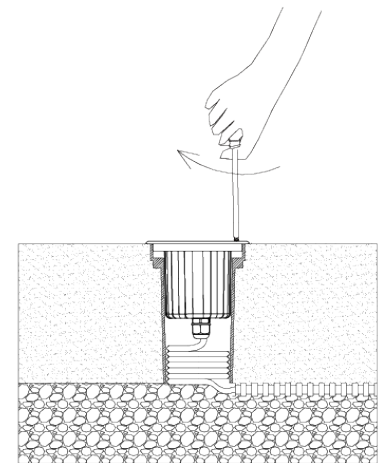

Place light fixture into the sleeve.

**Note: NO CONCRETE ENTERS THE BOX. USE SAND OR GRAVEL FOR PROPER DRAINAGE.**

## SOIL INSTALLATION

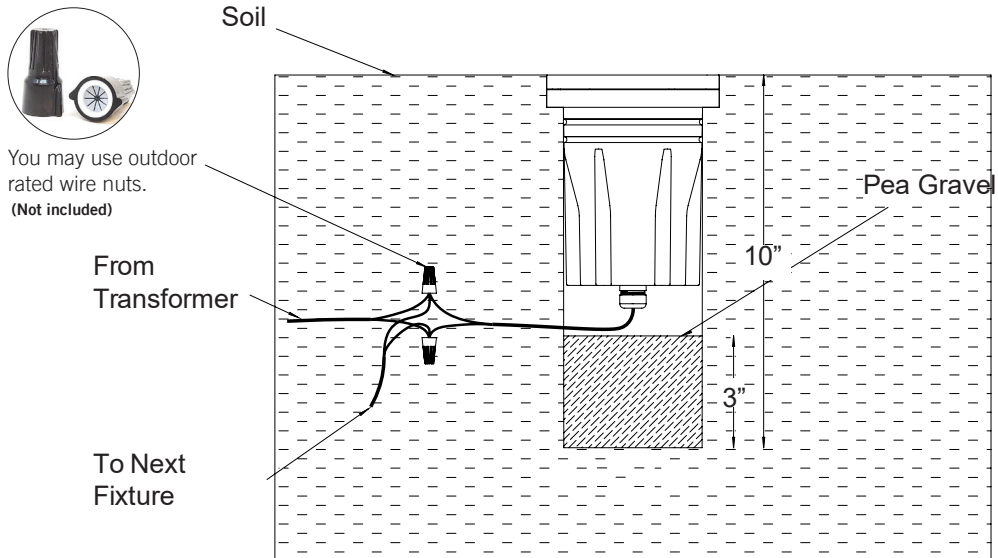

**Note: USE SAND OR GRAVEL FOR PROPER DRAINAGE.**

